


J. Eberspächer
GmbH & Co. KG
Eberspächerstr. 24
D-73730 Esslingen

Telefon (zentral)
(0711) 939-00
Telefax
(0711) 939-0500

www.eberspaecher.com

Control device – heating (without ventilation)

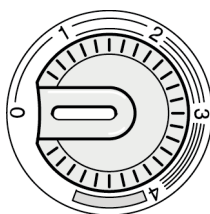

The control device allows you to adjust the heater installed in the vehicle to the temperatures you require and also to ventilate the vehicle interior.

Functions of the control device

Red field

„Heating“ – turning to the right results in higher heat output.

Position 0

„Off“ – after switch-off automatic delayed shutoff for cooling down.


Blue field

„Ventilation“ (if provided).

Illuminated field in knob

- When vehicle lights are on – red display.
- In heating operation – green display (pilot light).
- In the event of faults various flashing lights, consult workshop (if provided).
- In the event of overheating – steady green flashing (if provided).

Control device – heating / ventilation

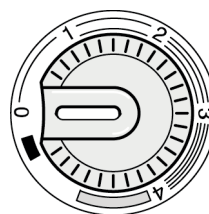

Self-help in the event of trouble

Non-starting

Switch off and back again. Not more than twice. Check fuse. Consult workshop.

Overheating

Remove cause (e. g. blockage of hot air ducts). Switch off and back on again. Not more than twice.

Please note!

- The specifications and safety instructions stated in the Technical Description of the heater must always be observed and heeded.
- For operation in combination with the heater timer, see operating instructions "Heater timer".

DE

SV

EN

FR